

WARNING: To reduce the risk of injury, read the pressure washer instruction manual and the engine instruction manual before operating pressure washer.

MSV3024 QUICK SETUP GUIDE

STOP IF YOU EXPERIENCE ANY ISSUES WITH YOUR PRESSURE WASHER, DO NOT RETURN TO COSTCO. WE ARE HERE TO HELP YOU.

CALL TOLL FREE 1-877-362-4271 www.SimpsonCleaning.com

SHOULD YOU REQUIRE ASSISTANCE WITH A PART THAT MAY BE BROKEN OR MISSING OR YOU ARE HAVING DIFFICULTY WITH ASSEMBLY OR STARTING PLEASE CONTACT US OR THE COSTCO CONCIERGE DESK AT 1-866-861-0450. YOUR COMPLETE SATISFACTION IS OUR PRIMARY OBJECTIVE.

(Letters A-C)

Install the Handle

Place handle onto frame, depress the snap buttons, and slide the handle assembly onto the frame until snap buttons snap into place.

	A
:4	Т
	В

DANGER:

Add/Check Oil he engine is shipped without oil. Before starting engine, add the oil provided using the oil spout. Check oil level prior to each use.

Refer to Engine Owner's Manual for complete procedure.

contains carbon monoxide, an odorless and deadly gas.

Never run engine indoors or in enclosed, poorly ventilated areas. Engine exhaust

• Risk of fluid injection and laceration. When using the high-pressure setting, DO NOT allow the high-pressure spray to come in contact with unprotected skin, eyes or with any pets or animals. Serious injury will occur.



Add Gasoline

In a well ventilated outdoor area add fresh, high quality, unleaded gasoline with a pump octane rating of 86 or higher. Do not overfill. Wipe up spilled fuel before starting the engine. Refer to Engine Owner's Manual for complete procedure.







MSV3024 QUICK START GUIDE

(Numbers 1-12)













Verify the Engine Switch is turned to the ON Position See Label #9 on the

side of the engine.



Verify the Choke Pin is Pulled Out to the **CLOSED** Position

The Choke Pin has been preset by the factory to be in the CLOSED Position. See Label #10 on the side of the engine.



Pull the Recoil **Starter Grip**

Pull the recoil starter grip to start the engine. See Label #11 on the side of the engine.



Push the Choke Pin to the **OPEN** Position Gradually move the Choke Pin to the OPEN Position after engine starts. See Label #12 on the side of the engine.



WARNING: This Guide is not a substitute for reading the operator's manual. User must read and understand operator's manual before using this product.