

## TRAILER OPERATIONS MANUAL

### SAFETY CONCERNS AND WARNING

This User's Manual contains safety information and instructions for your trailer. You must read this manual before loading, towing and using your Mobile Pressure Cleaning Trailer. You must follow all safety precautions and instructions.



FNA Group

7152 99th Street, Pleasant Prairie, WI 53158

[www.fna-group.com](http://www.fna-group.com)

FNA Group is a leading manufacturer of electric and gas engine powered, hot and cold pressure washers manufactured under the Simpson, Delco and Powerwasher brands. All content © SIMPSON®, FNA GROUP.

TOLL FREE CUSTOMER SERVICE: 877-362-4271

**1. General Safety Information**

A- Safety Alert Symbols and Words ..... 3  
B- Major Hazards ..... 3  
C- Improper Sizing of the Trailer to the Tow Vehicle ..... 3  
D- Driving too Fast ..... 3  
E- Failure to Adjust Driving Behavior When Towing a Trailer ..... 3  
F- Trailer Not Properly Coupled to the Hitch ..... 4  
G- Proper Use of Safety Chains ..... 4  
H- Proper Connection of Breakaway Brake ..... 5  
    I- Matching Trailer and Hitch ..... 5  
J- Worn Tires, Loose Wheels and Lug Nuts ..... 7  
K- Improper Loading ..... 7  
L- Unsafe Load Distribution ..... 7  
M- Shifting Cargo ..... 8  
N- Inappropriate Cargo ..... 8  
O- Inoperable Brakes, Lights or Mirrors ..... 8  
P- Hazards From Modifying Your Trailer ..... 8  
Q- Trailer Towing Guide ..... 9  
R- Reporting Safety Defects ..... 9  
S- Safety "SAFETY CONCERN" Labels on Your Trailer ..... 9  
T- Safe Trailer Towing Guidelines ..... 9

**2. Tire Safety Information**

A- Trailer Tire Information ..... 10  
B- Steps for Determining Correct Load Limit ..... 11  
C- Trailers 10,000 GVWR or Less ..... 11  
D- Trailers Over 10,000 lbs. GVWR ..... 11  
E- Steps for Determining Correct Load Limit Tow Vehicle ..... 11  
F- Glossary of Tire Terminology ..... 11-13  
G- Tire Safety Everything Rides On It ..... 13  
H- Safety First Basic Tire Maintenance ..... 13  
    I- Finding Your Vehicle's Recommended Tire Pressure and Load Limits ..... 13  
J- Understanding Tire Pressure and Load Limits ..... 13  
K- Checking Tire Pressure ..... 14  
L- Steps for Maintaining Proper Tire Pressure ..... 14  
M- Tire Size ..... 14  
N- Tire Tread ..... 14  
O- Tire Balance and Wheel Alignment ..... 14  
P- Tire Repair ..... 15  
Q- Tire Fundamentals ..... 15  
R- Information on Passenger Vehicle Tires ..... 15  
S- UTQGS Information ..... 15  
T- Additional Information on Light Truck Tires ..... 15  
U- Tire Safety Tips ..... 15

**3. Coupling to the Tow Vehicle**

A- Use an Adequate Tow Vehicle and Hitch ..... 16  
B- Trailer Information Certification/VIN Label ..... 16  
C- Definitions ..... 16-17  
D- Coupling and Uncoupling the Trailer ..... 17  
E- Various Coupler Designs ..... 17  
F- Trailer with Ball Coupler or Pintle Eye ..... 18

G- Before Coupling the Ball/Pintle Hook to the Tow Vehicle -----	18
H- Coupling with a Ball Hitch-----	18
I - Rig Safety Chains -----	19
J - Attach and Test Breakaway Brake System and Safety Components-----	19
<b>4 Loading the Trailer</b>	
A -Tongue Weight -----	20
B -Loading the Trailer-----	20
C -Checking Tongue Weight-----	20
D -Securing the Cargo-----	20
E -Preparing the Trailer for Loading-----	20
<b>5 Checking the Trailer Before and During Each Tow</b>	
A- Pre-Tow Checklist-----	21
B- Make Regular Stops -----	21
<b>6 Breaking In a New Trailer</b>	
A- Retighten Lug Nuts at First 10, 25 and 50 Miles -----	21
B- Adjust Brake Shoes at First 200 Miles -----	21
C- Synchronizing the Brake System -----	22
<b>7 Inspections, Service and Maintenance</b>	
A- Inspection, Service and Maintenance Summary Charts -----	22
B- Inspection and Service Before Each Use-----	22
C- Inspection and Service 6 Months/6000 Miles -----	22
D- Inspection and Service 12 Months/12000 Miles -----	22
E- Trailer Brakes -----	23
F- Trailer Connection To Tow Vehicle -----	23

## **1 -General Safety Information**

### **A – Safety Alerts, Symbols and Words**

This Owner's Manual provides general trailer information of the Mobile Pressure Cleaning Trailer details necessary for the safe operation of the trailer. Therefore, you must read, understand and follow the instructions given by the tow vehicle and trailer hitch manufacturers, as well as the instructions in this manual to determine if the trailer, tow vehicle and hitch are safely compatible.

Our trailers are built with components produced by various manufacturers. Some of these items have separate instruction manuals. If we stated that we provided additional product specific manuals you should read the other manual. If you do not have that manual, call FNA Group at 877-362-4271 for a free copy.

### **B – Major Hazard Concerns**

Loss of control of the trailer or trailer/tow vehicle combination can result in death or serious injury. The most common causes for loss of control of the trailer are:

- Improperly sizing the trailer for the tow vehicle, or vice versa.
- Excessive Speed: Driving too fast for the conditions.
- Failure to adjust driving behavior when towing a trailer.
- Overloading and/or improper weight distribution.
- Improper or mis-coupling of the trailer to the hitch.
- Improper braking and steering under sway conditions.
- Not maintaining proper tire pressure.
- Not keeping lug nuts tight.

### **C -Improper Sizing of the Trailer to the Tow Vehicle**

Trailers that weigh too much for the towing vehicle can cause stability problems, which can lead to death or serious injury. Furthermore, the additional strain put on the engine and drive train may lead to serious tow vehicle maintenance problems. For these reasons the maximum towing capacity of your towing vehicle should not be exceeded. The towing capacity of your tow vehicle, in terms of maximum Gross Trailer Weight (GTW) and maximum Gross Combined Weight Rating (GCWR) can be found in the tow vehicles Owner's Manual.

#### **CAUTION:**

- \*Immediate hazards which WILL result in severe personal injury or death if the SAFETY CONCERN is ignored.
- Use of a hitch with a load rating less than the load rating of the trailer can result in loss of control and may lead to death or serious injury.
- Use of a tow vehicle with a towing capacity less than the load rating of the trailer can result in loss of control, and may lead to death or serious injury.
- Be sure your hitch and tow vehicle are rated for the Gross Vehicle Weight Rating (GVWR) of your trailer.

### **D – Driving Too Fast**

With ideal road conditions, the maximum recommended speed for safely towing a trailer is 55mph unless posted slower. If you drive too fast, the trailer is more likely to sway, thus increasing the possibility for loss of control. Also your tires may overheat, thus increasing the possibility of a blowout.

#### **CAUTION:**

- \*Driving too fast for conditions can result in loss of control and cause death or serious injury. Decrease your speed as road, weather and lighting conditions deteriorate.

### **E – Failure to Adjust Driving Behavior When Towing a Trailer**

When towing a trailer, you will have decreased acceleration, increased stopping distance, and increased turning radius (which means you must make wider turns to keep from hitting curbs, vehicles, and anything else that is on the inside corner). Furthermore the trailer will change the handling characteristics of your towing vehicle, making it more sensitive to steering inputs and more likely to be pushed around in windy conditions or when being passed by large vehicles. In addition, you will need a longer distance to pass, due to slower acceleration and increased length.

With these caveats in mind:

- Be alert for slippery conditions. You are more likely to be effected by slippery road surfaces when driving a tow vehicle with a trailer, than driving a tow vehicle without a trailer.
- Anticipate the trailer "swaying." Swaying can be caused by excessive steering, wind gusts, roadway edges, or by the trailer reaction to the pressure wave created by passing trucks and busses.

- When encountering trailer sway take your foot off the gas, and steer as little as possible in order to stay on the road. Use small “trim like” steering adjustments. Do not attempt to steer out of the sway; you’ll only make it worse. Also do not apply the tow vehicle brakes to correct trailer swaying. On the other hand, application of the trailer brakes alone will tend to straighten out the combination, especially when going downhill.
- Check rear view mirrors frequently to observe the trailer and traffic.
- Use lower gear when driving down steep or long grades. Use the engine and transmission as a brake. Do not ride the brakes, as they can overheat and become ineffective.

### **F– Trailer Not Properly Coupled to the Hitch**

It is critical that the trailer be securely coupled to the hitch, and that the safety chains and emergency breakaway brake cable are correctly attached. Uncoupling may result in death or serious injury to you and to others.

Proper selection and condition of the coupler and hitch are essential to safely towing your trailer. A loss of coupling may result in death or serious injury.

- Be sure the hitch load rating is equal to or greater than the load rating of the coupler.
- Be sure the hitch size matches the coupler size.
- Observe the hitch for wear, corrosion and cracks before coupling. Replace worn, corroded or cracked hitch components before coupling the trailer to the tow vehicle.
- Be sure the hitch components are tight before coupling the trailer to the tow vehicle.

### **CAUTION:**

\*An improperly coupled trailer can result in death or serious injury. Do not move the trailer until:

- *The coupler is secured and locked to hitch*
- *The safety chains are secured to the tow vehicle*
- *The trailer jack(s) are fully retracted Do not tow the trailer on the road until:*
- *Tires and wheels are checked*
- *The trailer brakes are checked*
- *The breakaway switch is connected to the tow vehicle*
- *The load is secured to the trailer*
- *The trailer lights are connected and checked*

### **G – Proper Use of Safety Chains**

If your trailer comes loose from the hitch for any reason, we have provided safety chains so that control of the trailer can still be maintained.

### **CAUTION:**

\*Improper rigging of the safety chains can result in loss of control of the trailer and tow vehicle, leading to death or serious injury, if the trailer uncouples from the tow vehicle.

- Fasten chains to frame of tow vehicle. Do not fasten chains to any part of the hitch unless the hitch has holes or loops specifically for that purpose.
- Cross chains underneath hitch and coupler with enough slack to permit turning and to hold tongue up, if the trailer comes loose.
- Ensure chains do not drag on the ground during use.

### **H – Proper Connection of Breakaway Brake** (if equipped)

If equipped with brakes, your trailer will be equipped with a breakaway brake system that can apply the brakes on your trailer if your trailer comes loose from the hitch ball for any reason. You will have a separate set of instructions for the breakaway brake if your trailer is so equipped. The breakaway brake system, including battery, must be in good condition and properly rigged to be effective.

### **CAUTION:**

\*An ineffective or inoperative breakaway brake system can result in a runaway trailer, leading to death or serious injury if the coupler or hitch fails. The breakaway cable must be connected to the tow vehicle, and NOT to any part of the hitch. Before towing the trailer, test the function of the breakaway brake system. If the breakaway brake system is not working, do not tow the trailer. Have it serviced or repaired.

### **I– Matching Trailer and Hitch**

### **CAUTION:**

\*Use of a hitch with a load rating less than the load rating of the trailer can result in loss of control and may lead to death or serious injury. Use of a tow vehicle with a towing capacity less than the load rating of the trailer can result in loss of

control, and may lead to death or serious injury. Be sure your hitch and tow vehicle are rated for the Gross Vehicle Weight Rating (GVWR) of your trailer.

**There are five classes of Hitches for towing trailers.**

Each class is designed for a specific trailer weight range. The class of hitch you choose is mostly determined by your vehicle and its towing capacity. The vehicle towing capacity of your vehicle determines what it can be used for.

Sedans and SUVs can only handle smaller loads and probably will use a Class I hitch. Full size trucks and vans are built for larger loads and can use a Class III, IV or V hitch.

**\*Remember to always consult your owner's manual for vehicle rating.**

**Class I - Light trailers and accessories only**

- Class I hitches are weight carrying (WC) hitches rated up to 2000 lbs. gross trailer weight (GTW) with a 200 lbs. maximum trailer tongue weight (TW)
- A Class I hitch usually has a 1-1/4" square receiver opening.
- A higher class ball mount does not increase the towing capacity of the hitch.
- Class I hitches usually attach to the bumper, truck pan or vehicle frame.

**Class II - Medium weight trailers and accessories**

- Class II hitches are weight carrying (WC) hitches rated up to 3500 lbs. gross trailer weight (GTW) with a 300 lbs. maximum trailer tongue weight (TW)
- A Class II hitch usually has a 1-1/4" square receiver opening.
- A higher class ball mount does not increase the towing capacity of the hitch.
- Class II hitches usually attach to the bumper or vehicle frame.

**Class III - Larger trailers and accessories**

- Class III hitches used as weight carrying are rated up to 6000 lbs. gross trailer weight (GTW) with a 600 lbs. maximum trailer tongue weight (TW).
- Class III hitches used for weight distributing are rated up to 10,000 lbs. gross trailer weight (GTW) with a 1000 lbs. maximum trailer tongue weight (TW)
- Class III hitches are weight carrying (WC) and also are weight distributing (WD) depending on the vehicle and hitch specifications.
- Not all Class III hitches are rated to be both. See the specific hitch for that information.
- A Class III hitch usually has a 2" square receiver opening.
- A higher class ball mount does not increase the towing capacity of the hitch. To use this class of hitch for weight distribution requires a weight distribution system.
- Class III hitches attach to the vehicle frame only.

**Class IV - Larger trailers and accessories**

- Class IV hitches used as weight carrying are rated up to 10,000 lbs. gross trailer weight (GTW) with a 1000 lbs maximum trailer tongue weight (TW).
- Class IV hitches used for weight distributing are rated up to 14,000 lbs. gross trailer weight (GTW) with a 1400 lbs. maximum trailer tongue weight (TW).
- Class IV hitches are weight carrying (WC) and weight distributing (WD) hitches depending on the vehicle and hitch specifications.
- Not all Class IV hitches are rated to be both. See the specific hitch for that information.
- A Class IV hitch usually has a 2" square receiver opening.
- A higher class ball mount does not increase the towing capacity of the hitch. To use this class of hitch for weight distribution requires a weight distribution system.
- Class IV hitches attach to the vehicle frame only.

**Class V - Largest trailers and accessories**

- Class V hitches used as weight carrying are rated up to 12,000 lbs. gross trailer weight (GTW) with a 1200 lbs. maximum trailer tongue weight (TW).
- Class V hitches used for weight distributing are rated up to 17,000 lbs. gross trailer weight (GTW) with a 1700 lbs. maximum trailer tongue weight (TW).
- Class V hitches are weight carrying (WC) and weight distributing (WD) hitches depending on the vehicle and hitch specifications.
- A Class V hitch has a 2-1/2" square receiver opening.
- Your ball mount and hitch ball need to both be rated for Class V to safely tow these weight loads. To use this class of hitch for weight distribution requires a weight distribution system.
- Class V hitches attach to the vehicle frame only.

## **J– Worn Tires, Loose Wheels and Lug Nuts**

Just as with your tow vehicle the trailer tires and wheels are important safety items. Therefore, it is essential to inspect the trailer tires before each tow.

If a tire has a bald spot, bulge, cut, cracks, or is showing any cords, replace the tire before towing. If a tire has uneven tread wear, take the trailer to a dealer service center for diagnosis. Uneven tread wear can be caused by tire imbalance, axle misalignment or incorrect inflation.

Tires with too little tread will not provide adequate frictional forces on wet roadways and can result in loss of control, leading to death or serious injury.

Improper tire pressure causes increased tire wear and may reduce trailer stability, which can result in a tire blowout or possible loss of control. Therefore, before each tow you must also check the tire pressure. Remember, the proper tire pressure is listed on the Certification / VIN label, normally mounted on front left side of the trailer, and should be checked when tires are cold. Allow 3 hours cool down after driving as much as 1 mile at 40 mph before checking tire pressure.

### **CAUTION:**

\*Improper tire pressure can result in a blowout and loss of control, which can lead to death or serious injury.

Be sure tires are inflated to pressure indicated on sidewall before towing trailer.

The tightness of the lug nuts is very important in keeping the wheels properly seated to the hub. Before each tow, check to make sure they are tight.

The tightness of the lug nuts is very important in keeping the wheels properly seated to the hub. Before each tow, check to make sure they are tight.

### **CAUTION:**

\*Metal creep between the wheel rim and hub may cause lug nuts to loosen and could result in a wheel coming off, leading to death or serious injury. Tighten lug nuts before each tow.

The proper tightness (torque) for lug nuts is listed in Section 7 in the “Inspection and Service Instructions” chapter of this manual. Use a torque wrench to tighten the lug nuts, use the crisscross star pattern on page 27. If you do not have a torque wrench, use a lug wrench (from your tow vehicle) and tighten the nuts as much as you can. At the first opportunity, have a service garage or trailer dealer tighten the lug nuts to the proper torque.

Lug nuts are also prone to loosen after first being assembled. When driving a new trailer (or after wheels have been remounted), check to make sure they are tight after the first 10, 25 and 50 miles of driving and before each tow thereafter.

### **CAUTION:**

\*Failure to perform this check can result in a wheel separating from the trailer and a crash, leading to death or serious injury.

## **K – Improper Loading**

The total weight of the load you put in or on the trailer, plus the empty weight of the trailer itself, must not exceed the trailer's Gross Vehicle Weight Rating (GVWR).

Your Trailer is equipped with a Tire & Loading Information Placard, mounted next to the Certification / VIN label, the cargo capacity weight stated on that placard is only a close estimate. The GVWR and GAWR's are listed on the Certification / VIN label mounted on the front left side of the trailer. You will need to add the weight of the water tank full ie: 100 gallons adds 834 lbs (100 x 8.34). Add this weight to the trailer weight to determine the gross weight for transportation.

### **CAUTION:**

- An overloaded trailer can result in loss of control of the trailer, leading to death or serious injury.
- Do not exceed the trailer Gross Vehicle Weight Rating (GVWR) or the Gross Axle Weight Rating (GAWR).
- Do not load a trailer so that the weight on any tire exceeds its rating.
- Your Mobile Pressure Cleaning Trailer is manufactured to be balanced and safe for travel full of water. Adding items or storing items on the trailer may exceed the GVWR of the axle and GTW.
- Do not modify or add to the trailer.

## **L – Unsafe Load Distribution**

Improper front / rear load distribution can lead to poor trailer sway stability or poor tow vehicle handling. The Mobile Pressure Cleaning Trailer has been designed to have the proper tongue weight for towing empty or full. Adding items or storing items in or on the trailer other than tool boxes may exceed the GVWR of the axle and GTW which will change the tongue weight distribution and cause an unsafe traveling condition. Do not modify or add to the trailer.

Poor trailer sway stability results from tongue weights that are too low, and poor tow vehicle stability results from tongue weights that are too high.

Uneven left / right load distribution can cause tire, wheel, axle or structural failure. Be sure your trailer is evenly loaded left / right. Towing stability also depends on keeping the center of gravity as low as possible.

**CAUTION:**

**Tongue Weight as a Percentage of Loaded Trailer Weight**

\*Ball Hitch (or Bumper Hitch) 10-15%

Improper tongue weight (load distribution) can result in loss of control of the trailer, leading to death or serious injury. Make certain that tongue weight is within the allowable range. Be sure to:

- Do not alter the distribution of the load front-to-rear to provide proper tongue weight
- Do not alter the distribution of the load causing evenly, right and left, to avoid tire overload
- Keep the center of gravity low.

**M– Shifting Cargo**

Since the trailer “ride” can be bumpy and rough, you must add cargo to the trailer as it is designed and intended to be used as a Mobile Pressure Cleaning Trailer not a cargo trailer. Do not use for such a purpose.

**SAFETY CONCERN**

\*Shifting cargo can result in loss of control of the trailer, and can lead to death or serious injury. Mobile Pressure Cleaning Trailer’s are not designed to have added cargo of any kind. Do not tie down additional items to the trailer as it may overload the trailer or cause a shifting load safety hazard.

**N – Inappropriate Cargo**

Your trailer is designed for use as a Mobile Pressure Cleaning Trailer.

**SAFETY CONCERN**

\*Do not transport people on or inside the trailer. The transport of people puts their lives at risk and may be illegal.

**SAFETY CONCERN**

\*Do not transport flammable, explosive, poisonous or other dangerous materials in or on your trailer.

**O – Inoperable Brakes, Lights or Mirrors**

Be sure that the electric brakes, if equipped and all of the lights on your trailer are functioning properly before towing your trailer. Electric brakes and lights on a trailer are controlled via a connection to the tow vehicle, generally a multi-pin electrical connector. Check the trailer tail lights by turning on your tow vehicle headlights. Check the trailer brake lights by having someone step on the tow vehicle brake pedal while you look at trailer lights. Do the same thing to check the turn signal lights. If your trailer has electric brakes, your tow vehicle will have an electric brake controller that sends power to the trailer brakes. Before towing the trailer on the road, you must operate the brake controller while trying to pull the trailer in order to confirm that the electric brakes operate. While towing the trailer at less than 5 mph, manually operate the electric brake controller in the tow vehicle cab. You should feel the operation of the trailer brakes.

**SAFETY CONCERN**

Improper electrical connection between the tow vehicle and the trailer will result in inoperable lights and electric brakes, and can lead to collision.

Before each tow:

- Check that the taillights, brake lights and turn signals work
- Check that the electric brakes work by operating the brake controller inside the tow vehicle

If your trailer has hydraulic “surge” brakes, pull the emergency break-away brake lanyard to check the operation of the surge mechanism. Standard mirrors usually do not provide adequate visibility for viewing traffic to the sides and rear a towed trailer. You must provide mirrors that allow you to safely observe approaching traffic.

**P – Hazards From Modifying Your Trailer**

Essential safety items can be damaged by altering your trailer. Alteration of the trailer structure or modification of mechanical, electrical, plumbing, heating or other systems on your trailer must be performed only by qualified technicians who are familiar with the system as installed on your trailer.

## **Q – Trailer Towing Guide**

Driving a vehicle with a trailer in tow is vastly different from driving the same vehicle without a trailer in tow. Acceleration, maneuverability and braking are all diminished with a trailer in tow. It takes longer to get up to speed; you need more room to turn and pass, and more distance to stop when towing a trailer. You will need to spend time adjusting to the different feel and maneuverability of the tow vehicle with a loaded trailer. Because of the significant differences in all aspects of maneuverability when towing a trailer, the hazards and risks of injury are also much greater than when driving without a trailer. You are responsible for keeping your vehicle and trailer in control, and for all the damage that is caused if you lose control of your vehicle and trailer.

As you did when learning to drive an automobile, find an open area with little or no traffic for your first practice trailering. Of course, before you start towing the trailer, you must follow all of the instructions for inspection, testing, loading and coupling. Also, before you start towing, adjust the mirrors so you can see the trailer as well as the area to the rear of it. Drive slowly at first, 5 mph or so, and turn the wheel to get the feel of how the tow vehicle and trailer combination responds. Next, make some right and left hand turns. Watch in your side mirrors to see how the trailer follows the tow vehicle. Turning with a trailer attached requires more room. Stop the rig a few times from speeds no greater than 10 mph. If your trailer is equipped with brakes, try using different combinations of trailer/electric brake and tow vehicle brake. Note the effect that the trailer brakes have when they are the only brakes used. When properly adjusted, the trailer brakes will come on just before the tow vehicle brakes. It will take practice to learn how to back up a tow vehicle with a trailer attached. Take it slow. Before backing up, get out of the tow vehicle and look behind the trailer to make sure that there are no obstacles. Some drivers place their hands at the bottom of the steering wheel, and while the tow vehicle is in reverse, “think” of the hands as being on the top of the wheel. When the hands move to the right (counter-clockwise, as you would do to turn the tow vehicle to the left when moving forward), the rear of the trailer moves to the right. Conversely, rotating the steering wheel clockwise with your hands at the bottom of the wheel will move the rear of the trailer to the left, while backing up. If you are towing a bumper hitch rig, be careful not to allow the trailer to turn too much, because it will hit the rear of the tow vehicle. To straighten the rig, either pull forward, or turn the steering wheel in the opposite direction.

## **R – Reporting Safety Defects**

If you believe that your vehicle has a defect that could cause a crash or could cause injury or death, you should immediately inform the National Highway Traffic Safety Administration (NHTSA) in addition to notifying FNA Group. If NHTSA receives similar complaints, it may open an investigation, and if it finds that a safety defect exists in a group of vehicles, it may order a recall and remedy campaign. However, NHTSA cannot become involved in individual problems between you, your dealer, or FNA Group.

To contact NHTSA, you may either call the Vehicle Safety Hotline toll-free at 1-888-327-4236 (TTY: 1-800- 424-9153), go to <http://www.safercar.gov>; or write to: Administrator, NHTSA, 1200 New Jersey Avenue S.E. Washington, DC 20590

You can also obtain other information about motor vehicle safety from <http://www.safercar.gov>

## **S – Safety WARNING Labels on Your Trailer**

Please review and adhere to all the SAFETY CONCERN labels and their placement on the trailer.

### **SAFETY CONCERN**

To protect you and others against death or serious injury, all of the labels shown above must be on the trailer and must be legible.

## **T– Safe Trailer Towing Guidelines**

- Before towing, check coupling, safety chain, safety brake, tires, wheels and lights.
- Check the lug nuts or bolts for tightness.
- Check coupler tightness after towing 50 miles.
- Adjust the brake controller to engage the trailer brakes before the tow vehicle brakes. Use your mirrors to verify that you have room to change lanes or pull into traffic.
- Use your turn signals well in advance.
- Allow plenty of stopping space for your trailer and tow vehicle.
- Do not drive so fast that the trailer begins to sway due to speed. Generally never drive faster than 55 m.p.h.
- Allow plenty of room for passing. A rule of thumb is that the passing distance with a trailer is 4 times the passing distance without a trailer.
- Shift your automatic transmission into a lower gear for city driving.
- Use lower gears for climbing and descending grades.
- Do not ride the brakes while descending grades, they may get so hot that they stop working. Then you will potentially have runaway tow vehicle and trailer.

- To conserve fuel, don't use full throttle to climb a hill. Instead, build speed on the approach.
- Slow down for bumps in the road. Take your foot off the brake when crossing the bump.
- Do not brake while in a curve unless absolutely necessary. Instead, slow down before you enter the curve.
- Do not apply the tow vehicle brakes to correct extreme trailer swaying. Instead, lightly apply the trailer brakes with the hand controller.
- Make regular stops, about once each hour.

Confirm that:

- The coupler is secure to the hitch and is locked,
- Electrical connectors are made,
- There is appropriate slack in the safety chains,
- There is appropriate slack in the breakaway switch pull pin cable,
- The tires are not visibly low on pressure, and
- The cargo is secure and in good condition.

## **2 - TIRE SAFETY INFORMATION**

This portion of the User's Manual contains tire safety information as required by 49 CFR 575.6.

Section 2.A contains Trailer Tire Information.

Section 2.B contains Steps for Determining Correct Load Limit - Trailer.

Section 2.C contains Steps for Determining Correct Load Limit – Tow Vehicle.

Section 2.D contains a Glossary of Tire Terminology, including “cold inflation pressure”, “maximum inflation pressure”, “recommended inflation pressure”, and other non-technical terms.

Section 2.E contains information from the NHTSA brochure entitled Tire Safety – Everything Rides On It.

This brochure, as well as preceding subsections, describes the following items;

Tire labeling, including a description and explanation of each marking on the tires, and information about the DOT Tire Identification Number (TIN).

Recommended tire inflation pressure, including a description and explanation of:

- Cold inflation pressure.
- Vehicle Placard and location on the vehicle.
- Adverse safety consequences of under inflation (including tire failure).
- Measuring and adjusting air pressure for proper inflation.
- Tire Care, including maintenance and safety practices.
- Vehicle load limits, including a description and explanation of the following items:
  1. Locating and understanding the load limit information, total load capacity, and cargo capacity.
  2. Calculating total and cargo capacities with varying seating configurations including quantitative examples showing/illustrating how the vehicles cargo and luggage capacity decreases as combined number and size of occupants' increases. This item is also discussed in Section 3.
  3. Determining compatibility of tire and vehicle load capabilities.
  4. Adverse safety consequences of overloading on handling and stopping on tires.

### **A – Trailer Tire Information**

Trailer tires may be worn out even though they still have plenty of tread left. This is because trailer tires have to carry a lot of weight all the time, even when not in use.

It is actually better for the tire to be rolling down the road than to be idle. During use, the tire releases lubricants that are beneficial to tire life. Using the trailer tires often also helps prevent fl at spots from developing. The main cause of tire failure is improper inflation. Check the cold tire inflation pressures at least once a week for proper inflation levels.

“Cold” means that the tires are at the same temperature as the surrounding air, such as when the vehicle has been parked overnight. Wheel and tire manufacturers recommend adjusting the air pressure to the trailer manufacturer's recommended cold inflation pressure, in pounds per square inch (PSI) stated on the vehicle's Federal Certification Label or Tire Placard when the trailer is loaded to its gross vehicle weight rating (GVWR).

If the tires are inflated to less than the recommended inflation level or the GVWR of the trailer is exceeded, the load carrying capacity of the tire could be dramatically affected. If the tires are inflated more than the recommended inflation level, handling characteristics of the tow vehicle/trailer combination could be affected. Refer to the owner's manual or talk to your dealer or vehicle manufacturer if you have any questions regarding proper inflation practices. Tires can lose air over a period of time. In fact, tires can lose 1 to 3 PSI per month. This is because molecules of air, under pressure, weave their way from the inside of the tire, through the rubber, to the outside. A drop in tire pressure could cause the tire to become overloaded, leading to excessive heat build up. If a trailer tire is under-inflated, even for a short period of time, the tire could suffer internal damage.

High speed towing in hot conditions degrades trailer tires significantly. As heat builds up during driving, the tire's internal structure starts to breakdown, compromising the strength of the tire. It is recommended to drive at moderate speeds.

Statistics indicate the average life of a trailer tire is about five years under normal use and maintenance conditions.

After three years replacing the trailer tires with new ones should be considered, even if the tires have adequate tread depth. Some experts claim that after five years, trailer tires are considered worn out and should be replaced, even if they have had minimal or no use. This is such a general statement that it may not apply in all cases. It is best to have your tires inspected by a tire supplier to determine if your tires need to be replaced. If you are storing your trailer for an extended period, make sure the tires are fully inflated to the maximum rated pressure and that you store them in a cool, dry place, such as a garage. Use tire covers to protect the trailer tires from the harsh effects of the sun.

## **B – Steps for Determining Correct Load Limit**

The most important load limit of your (GVWR). The total loaded weight of The available cargo and luggage equipment installed on your trailer. spare tire brackets, generators, tool reduce the available payload. The for on the Tire and Loading Information Placard if they were installed on your trailer after it left the factory. If any additional items have been installed on your trailer (by a dealer, reseller or previous owner) you must weigh the empty trailer to determine the available payload capacity. Use the instructions found in Section 2.1.2 to determine the correct load limit for your trailer if you believe that additional equipment may have been mounted to your trailer.

TIRE AND LOADING INFORMATION			
The weight of cargo should never exceed XXX kg. or XXX lbs.			
TIRE	SIZE	COLD TIRE PRESSURE	SEE OWNER'S MANUAL FOR ADDITIONAL INFORMATION
FRONT	20.5x8.0-10(E)	621KPA, 90PSI	
REAR			
SPARE	NONE		

trailer is the Gross Vehicle Weight Rating the trailer must never exceed the GVWR. (payload) capacity will be reduced by any Even semi-permanent equipment such as boxes, compressors, batteries, etc. may weights of these items will not be accounted for on the Tire and Loading Information Placard if they were installed on your trailer after it left the factory. If any additional items have been installed on your trailer (by a dealer, reseller or previous owner) you must weigh the empty trailer to determine the available payload capacity. Use the instructions found in Section 2.1.2 to determine the correct load limit for your trailer if you believe that additional equipment may have been mounted to your trailer.

## **C – Trailers 10,000 GVWR or Less**

- Locate the statement, “The weight of cargo should never exceed XXX kg or XXX lbs.,” on your vehicle’s placard.
- This figure equals the load capacity the water tank full.

## **D – Trailers Over 10,000 lbs. GVWR**

Note: These trailers are not required to have a tire information placard on the vehicle.

- Determine the empty weight of your trailer by weighing the trailer using a public scale or other means. This step does not have to be repeated.
- Locate the GVWR (Gross Vehicle Weight Rating) of the trailer on your trailer’s VIN (Certification) label.
- Subtract the empty weight of your trailer from the GVWR stated on the VIN label. That weight is the maximum cargo capacity full of water and may not be safely exceeded.

## **E – Glossary of Tire Terminology**

**ACCESSORY WEIGHT** - The combined weight (in excess of those standard items which may be replaced) of automatic transmission, power steering, power brakes, power windows, power seats, radio and heater, to the extent that these items are available as factory-installed equipment (whether installed or not).

**BEAD** - The part of the tire that is made of steel wires, wrapped or reinforced by ply cords and that is shaped to fit the rim.

**BEAD SEPARATION** - This is the breakdown of the bond between components in the bead.

**BIAS PLY TIRE** - A pneumatic tire in which the ply cords that extend to the beads are laid at alternate angles substantially less than 90 degrees to the centerline of the tread.

**CARCASS** - The tire structure, except tread and sidewall rubber which, when inflated, bears the load.

**CHUNKING** - The breaking away of pieces of the tread or sidewall.

**COLD INFLATION PRESSURE** - The pressure in the tire before you drive.

**CORD** - The strands forming the plies in the tire.

**CORD SEPARATION** - The parting of cords from adjacent rubber compounds.

**CRACKING** - Any parting within the tread, sidewall, or inner liner of the tire extending to cord material.

**CT** - A pneumatic tire with an inverted flange tire and rim system in which the rim is designed with rim flanges pointed radially inward and the tire is designed to fit on the underside of the rim in a manner that encloses the rim flanges inside the air cavity of the tire.

**CURB WEIGHT** -The weight of a motor vehicle with standard equipment including the maximum capacity of fuel, oil, and coolant, and, if so equipped, air conditioning and additional weight optional engine.

**EXTRA LOAD TIRE** - A tire designed to operate at higher loads and at higher inflation pressures than the corresponding standard tire.

**GROOVE** - The space between two adjacent tread ribs.

**INNERLINER** - The layer(s) forming the inside surface of a tubeless tire that contains the inflating medium within the tire.

**INNERLINER SEPARATION** - The parting of the innerliner from cord material in the carcass.

**INTENDED OUTBOARD SIDEWALL** - The sidewall that contains a white-wall, bears white lettering or bears manufacturer, brand, and/or model name molding that is higher or deeper than the same molding on the other sidewall

of the tire or the outward facing sidewall of an asymmetrical tire that has a particular side that must always face outward when mounted on a vehicle.

**LIGHT TRUCK (LT) TIRE** - A tire designated by its manufacturer as primarily intended for use on lightweight trucks or multipurpose passenger vehicles.

**LOAD RATING** - The maximum load that a tire is rated to carry for a given inflation pressure.

**MAXIMUM LOAD RATING** - The load rating for a tire at the maximum permissible inflation pressure for that tire.

**MAXIMUM PERMISSIBLE INFLATION PRESSURE** - The maximum cold inflation pressure to which a tire may be inflated.

**MAXIMUM LOADED VEHICLE WEIGHT** - The sum of curb weight, accessory weight, vehicle capacity weight, and production options weight.

**MEASURING RIM** - The rim on which a tire is fitted for physical dimension requirements.

**NON-PNEUMATIC RIM** - A mechanical device which, when a non-pneumatic tire assembly incorporates a wheel, supports the tire, and attaches, either integrally or separably, to the wheel center member and upon which the tire is attached.

**NON-PNEUMATIC SPARE TIRE ASSEMBLY** - A non-pneumatic tire assembly intended for temporary use in place of one of the pneumatic tires and rims that are fitted to a passenger car in compliance with the requirements of this standard.

**NON-PNEUMATIC TIRE** - A mechanical device which transmits, either directly or through a wheel or wheel center member, the vertical load and tractive forces from the roadway to the vehicle, generates the tractive forces that provide the directional control of the vehicle and does not rely on the containment of any gas or fluid for providing those functions.

**NON-PNEUMATIC TIRE ASSEMBLY** - A non-pneumatic tire, alone or in combination with a wheel or wheel center member, which can be mounted on a vehicle.

**NORMAL OCCUPANT WEIGHT** - This means 68 kilograms (150 lbs.) times the number of occupants specified in the second column of Table I of 49 CFR 571.110.

**OCCUPANT DISTRIBUTION** - The distribution of occupants in a vehicle as specified in the third column of Table I of 49 CFR 571.110.

**OPEN SPLICE** - Any parting at any junction of tread, sidewall, or inner liner that extends to cord material.

**OUTER DIAMETER** - The overall diameter of an inflated new tire.

**OVERALL WIDTH** - The linear distance between the exteriors of the sidewalls of an inflated tire, including elevations due to labeling, decorations, or protective bands or ribs.

**PLY** - A layer of rubber-coated parallel cords.

**PLY SEPARATION** - A parting of rubber compound between adjacent plies.

**PNEUMATIC TIRE** - A mechanical device made of rubber, chemicals, fabric and steel or other materials, that, when mounted on an automotive wheel, provides the traction and contains the gas or fluid that sustains the load.

**PRODUCTION OPTIONS WEIGHT** - The combined weight of those installed regular production options weighing over 2.3 kilograms (5 lbs.) in excess of those standard items which they replace, not previously considered in curb weight or accessory weight, including heavy duty brakes, ride levelers, roof rack, heavy duty battery, and special trim.

**RADIAL PLY TIRE** - A pneumatic tire in which the ply cords that extend to the beads are laid at substantially 90 degrees to the centerline of the tread.

**RECOMMENDED INFLATION PRESSURE** - This is the inflation pressure provided by the vehicle manufacturer on the Tire Information label and on the Certification / VIN tag.

**REINFORCED TIRE** - A tire designed to operate at higher loads and at higher inflation pressures than the corresponding standard tire.

**RIM** - A metal support for a tire or a tire and tube assembly upon which the tire beads are seated.

**RIM DIAMETER** - This means the nominal diameter of the bead seat.

**RIM SIZE DESIGNATION** - This means the rim diameter and width.

**RIM TYPE DESIGNATION** - This means the industry of manufacturer's designation for a rim by style or code.

**RIM WIDTH** - This means the nominal distance between rim flanges.

**SECTION WIDTH** - The linear distance between the exteriors of the sidewalls of an inflated tire, excluding elevations due to labeling, decoration, or protective bands.

**SIDEWALL** - That portion of a tire between the tread and bead.

**SIDEWALL SEPARATION** - The parting of the rubber compound from the cord material in the sidewall.

**SPECIAL TRAILER (ST) TIRE** - The "ST" is an indication the tire is for trailer use only.

**TEST RIM** - The rim on which a tire is fitted for testing, and may be any rim listed as appropriate for use with that tire.

**TREAD** - That portion of a tire that comes into contact with the road.

**TREAD RIB** - A tread section running circumferentially around a tire.

**TREAD SEPARATION** - Pulling away of the tread from the tire carcass.

**TREADWEAR INDICATORS (TWI)** - The projections within the principal grooves designed to give a visual indication of the degrees of wear of the tread.

**VEHICLE CAPACITY WEIGHT** - The rated cargo and luggage load plus 68 kg (150 lbs.) times the vehicle's designated seating capacity.

**VEHICLE MAXIMUM LOAD ON THE TIRE** - The load on an individual tire that is determined by distributing to each axle its share of the maximum loaded vehicle weight and dividing by two.

**VEHICLE NORMAL LOAD ON THE TIRE** - The load on an individual tire that is determined by distributing to each axle its share of the curb weight, accessory weight, and normal occupant weight (distributed in accordance with Table I of CRF 49 571.110) and dividing by 2.

**WEATHER SIDE** - The surface area of the rim not covered by the inflated tire.

**WHEEL CENTER MEMBER** - In the case of a non-pneumatic tire assembly incorporating a wheel, a mechanical device which attaches, either integrally or separably, to the nonpneumatic rim and provides the connection between the non-pneumatic rim and the vehicle; or, in the case of a non-pneumatic tire assembly not incorporating a wheel, a mechanical device which attaches, either integrally or separably, to the non-pneumatic tire and provides the connection between tire and the vehicle.

**WHEEL-HOLDING FIXTURE** - The fixture used to hold the wheel and tire assembly securely during testing.

## **F – Tire Safety – Everything Rides On It**

The National Traffic Safety Administration (NHTSA) has published a brochure (DOT HS 809 361) that discusses all aspects of Tire Safety, as required by CFR 575.6. This brochure is reproduced in part below. It can be obtained and downloaded from NHTSA, free of charge, from the following web site:

[http://www.nhtsa.gov/cars/rules/TireSafety/ridesonit/tires\\_index.html](http://www.nhtsa.gov/cars/rules/TireSafety/ridesonit/tires_index.html)

Studies of tire safety show that maintaining proper tire pressure, observing tire and vehicle load limits (not carrying more weight in your vehicle than your tires or vehicle can safely handle), avoiding road hazards, and inspecting tires for cuts, slashes, and other irregularities are the most important things you can do to avoid tire failure, such as tread separation or blowout and flat tires. These actions, along with other care and maintenance activities, can also:

- Improve vehicle handling
- Help protect you and others from avoidable breakdowns and accidents
- Improve fuel economy
- Increase the life of your tires.

This booklet presents a comprehensive overview of tire safety, including information on the following topics:

- Basic tire maintenance
- Uniform Tire Quality Grading System
- Fundamental characteristics of tires
- Tire safety tips.

Use this information to make tire safety a regular part of your vehicle maintenance routine. Recognize that the time you spend is minimal compared with the inconvenience and safety consequences of a flat tire or other tire failure.

## **G – Safety First – Basic Tire Maintenance**

Properly maintained tires improve the steering, stopping, traction, and load-carrying capability of your vehicle.

Underinflated tires and overloaded vehicles are a major cause of tire failure. Therefore, as mentioned above, to avoid flat tires and other types of tire failure, you should maintain proper tire pressure, observe tire and vehicle load limits, avoid road hazards, and regularly inspect your tires.

## **H – Finding Your Vehicle's Recommended Tire**

**Pressure and Load Limits**

Tire information placards and vehicle certification labels contain information on tires and load limits.

These labels indicate the vehicle manufacturer's information including:

- Recommended tire size
- Recommended tire inflation pressure
- Vehicle capacity weight (VCW—the maximum occupant and cargo weight a vehicle is designed to carry)
- Front and rear gross axle weight ratings (GAWR—the maximum weight the axle systems are designed to carry). Both placards and certification labels are permanently attached to the trailer near the left front.

## **I – Understanding Tire Pressure and Load Limits**

Tire inflation pressure is the level of air in the tire that provides it with load-carrying capacity and affects the overall performance of the vehicle. The tire inflation pressure is a number that indicates the amount of air pressure—measured in pounds per square inch (psi)—a tire requires to be properly inflated. (You will also find this number on the vehicle information placard expressed in kilopascals (kPa), which is the metric measure used internationally.)

Manufacturers of passenger vehicles and light trucks determine this number based on the vehicle's design load limit, that is, the greatest amount of weight a vehicle can safely carry and the vehicle's tire size. The proper tire pressure for your vehicle is referred to as the "recommended cold inflation pressure." (As you will read below, it is difficult to obtain

the recommended tire pressure if your tires are not cold.) Because tires are designed to be used on more than one type of vehicle, tire manufacturers list the "maximum permissible inflation pressure" on the tire sidewall. This number is the greatest amount of air pressure that should ever be put in the tire under normal driving conditions.

### **J – Checking Tire Pressure**

It is important to check your vehicle's tire pressure at least once a month for the following reasons:

- Most tires may naturally lose air over time.
- Tires can lose air suddenly if you drive over a pothole or other object or if you strike the curb when parking.
- With radial tires, it is usually not possible to determine under inflation by visual inspection.

For convenience, purchase a tire pressure gauge to keep in your vehicle. Gauges can be purchased at tire dealerships, auto supply stores, and other retail outlets. The recommended tire inflation pressure that vehicle manufacturers provide reflects the proper psi when a tire is cold. The term cold does not relate to the outside temperature. Rather, a cold tire is one that has not been driven on for at least three hours. When you drive, your tires get warmer, causing the air pressure within them to increase. Therefore, to get an accurate tire pressure reading, you must measure tire pressure when the tires are cold or compensate for the extra pressure in warm tires.

### **K – Steps for Maintaining Proper Tire Pressure**

- Step 1: Locate the recommended tire pressure on the vehicle's tire information placard, certification label, or in the owner's manual.
- Step 2: Record the tire pressure of all tires.
- Step 3: If the tire pressure is too high in any of the tires, slowly release air by gently pressing on the tire valve stem with the edge of your tire gauge until you get to the correct pressure.
- Step 4: If the tire pressure is too low, note the difference between the measured tire pressure and the correct tire pressure. These "missing" pounds of pressure are what you will need to add.
- Step 5: At a service station, add the missing pounds of air pressure to each tire that is underinflated.
- Step 6: Check all the tires to make sure they have the same air pressure (except in cases in which the front and rear tires are supposed to have different amounts of pressure).

If you have been driving your vehicle and think that a tire is underinflated, fill it to the recommended cold inflation pressure indicated on your vehicle's tire information placard or certification label. While your tire may still be slightly underinflated due to the extra pounds of pressure in the warm tire, it is safer to drive with air pressure that is slightly lower than the vehicle manufacturer's recommended cold inflation pressure than to drive with a significantly underinflated tire. Since this is a temporary fix, don't forget to recheck and adjust the tire's pressure when you can obtain a cold reading.

### **L – Tire Size**

To maintain tire safety, purchase new tires that are the same size as the vehicle's original tires or another size recommended by the manufacturer. Look at the tire information placard, the owner's manual, or the sidewall of the tire you are replacing to find this information. If you have any doubt about the correct size to choose, consult with the tire dealer.

### **M – Tire Tread**

The tire tread provides the gripping action and traction that prevent your vehicle from slipping or sliding, especially when the road is wet or icy. In general, tires are not safe and should be replaced when the tread is worn down to 1/16 of an inch. Tires have built-in treadwear indicators that let you know when it is time to replace your tires. These indicators are raised sections spaced intermittently in the bottom of the tread grooves. When they appear "even" with the outside of the tread, it is time to replace your tires. Another method for checking tread depth is to place a penny in the tread with Lincoln's head upside down and facing you. If you can see the top of Lincoln's head, you are ready for new tires.

### **N – Tire Balance and Wheel Alignment**

To avoid vibration or shaking of the vehicle when a tire rotates, the tire must be properly balanced. This balance is achieved by positioning weights on the wheel to counterbalance heavy spots on the wheel-and-tire assembly. A wheel alignment adjusts the angles of the wheels so that they are positioned correctly relative to the vehicle's frame. This adjustment maximizes the life of your tires. These adjustments require special equipment and should be performed by a qualified technician.

### **O – Tire Repair**

The proper repair of a punctured tire requires a plug for the hole and a patch for the area inside the tire that surrounds the puncture hole. Punctures through the tread can be repaired if they are not too large, but punctures to the sidewall should not be repaired. Tires must be removed from the rim to be properly inspected before being plugged and patched.

## **P – Tire Fundamentals**

Federal law requires tire manufacturers to place standardized information on the sidewall of all tires. This information identifies and describes the fundamental characteristics of the tire and also provides a tire identification number for safety standard certification and in case of a recall.

## **Q – Information on Passenger Vehicle Tires**

P - The "P" indicates the tire is for passenger vehicles.

NEXT NUMBER - This three-digit number gives the width in millimeters of the tire from sidewall edge to sidewall edge.

In general, the larger the number, the wider the tire.

NEXT NUMBER - This two-digit number, known as the aspect ratio, gives the tire's ratio of height to width. Numbers of 70 or lower indicate a short sidewall for improved steering response and better overall handling on dry pavement.

R - The "R" stands for radial. Radial ply construction of tires has been the industry standard for the past 20 years.

NEXT NUMBER - This two-digit number is the wheel or rim diameter in inches. If you change your wheel size, you will have to purchase new tires to match the new wheel diameter.

NEXT NUMBER - This two- or three-digit number is the tire's load index. It is a measurement of how much weight each tire can support. You may find this information in your owner's manual. If not, contact a local tire dealer. Note: You may not find this information on all tires because it is not required by law.

M+S - The "M+S" or "M/S" indicates that the tire has some mud and snow capability. Most radial tires have these markings; hence, they have some mud and snow capability.

U.S. DOT TIRE IDENTIFICATION NUMBER - This begins with the letters "DOT" and indicates that the tire meets all federal standards. The next two numbers or letters are the plant code where it was manufactured, and the last four numbers represent the week and year the tire was built. For example, the numbers 3197 means the 31st week of 1997. The other numbers are marketing codes used at the manufacturer's discretion. This information is used to contact consumers if a tire defect requires a recall.

TIRE PLY COMPOSITION AND MATERIALS USED - The number of plies indicates the number of layers of rubber-coated fabric in the tire. In general, the greater the number of plies, the more weight a tire can support. Tire manufacturers also must indicate the materials in the tire, which include steel, nylon, polyester, and others.

MAXIMUM LOAD RATING - This number indicates the maximum load in kilograms and pounds that can be carried by the tire.

MAXIMUM PERMISSIBLE INFLATION PRESSURE - This number is the greatest amount of air pressure that should ever be put in the tire under normal driving conditions.

UTQGS (The Uniform Tire Quality Grading Standards Information) TREADWEAR NUMBER - This number indicates the tire's wear rate. The higher the treadwear number is, the longer it should take for the tread to wear down. For example, a tire graded 400 should last twice as long as a tire graded 200.

TRACTION LETTER - This letter indicates a tire's ability to stop on wet pavement. A higher graded tire should allow you to stop your car on wet roads in a shorter distance than a tire with a lower grade. Traction is graded from highest to lowest as "AA", "A", "B", and "C".

TEMPERATURE LETTER - This letter indicates a tire's resistance to heat. The temperature grade is for a tire that is inflated properly and not overloaded. Excessive speed, under inflation or excessive loading, either separately or in combination, can cause heat build-up and possible tire failure. From highest to lowest, a tire's resistance to heat is graded as "A", "B", or "C".

## **R – Additional Information on Light Truck Tires**

Tires for light trucks have other markings besides those found on the sidewalls of passenger tires.

LT - The "LT" indicates the tire is for light trucks or trailers.

ST - An "ST" is an indication the tire is for trailer use only.

MAX. LOAD DUAL KG (LBS) AT KPA (PSI) COLD - This information indicates the maximum load and tire pressure when the tire is used as a dual, that is, when four tires are put on each rear axle (a total of six or more tires on the vehicle).

MAX. LOAD SINGLE KG (LBS) AT KPA (PSI) COLD - This information indicates the maximum load and tire pressure when the tire is used as a single.

LOAD RANGE - This information identifies the tire's load-carrying capabilities and its inflation limits.

## **S – Tire Safety Tips**

Preventing Tire Damage

- Slow down if you have to go over a pothole or other object in the road.
- Do not run over curbs or other foreign objects in the roadway, and try not to strike the curb when parking.

Tire Safety Checklist

- Check tire pressure regularly (at least once a month), including the spare.
- Inspect tires for uneven wear patterns on the tread, cracks, foreign objects, or other signs of wear or trauma.

- Remove bits of glass and foreign objects wedged in the tread.
- Make sure your tire valves have valve caps.
- Check tire pressure before going on a long trip.
- Do not overload your vehicle.

Check the Tire Information and Loading Placard or User's Manual for the maximum recommended load for the vehicle.

### **3- COUPLING TO THE TOW VEHICLE**

Follow all of the safety precautions and instructions in this manual to ensure safety of persons, cargo, and satisfactory life of the trailer.

#### **A – Use an Adequate Tow Vehicle and**

##### **Hitch**

If the vehicle or hitch is not properly selected and matched to the Gross Vehicle Weight Rating (GVWR) of your trailer, you can cause an accident that could lead to death or serious injury. If you already have a tow vehicle, know your vehicle tow rating, and Gross Combination Weight Rating (GCWR) and make certain the trailer's rated capacity is less than or equal to the tow vehicle's rated towing capacity. If you already have (or plan to buy) a trailer, make certain that the tow rating of the tow vehicle is equal to or greater than the GVWR of the trailer, and that the GCWR will be within limits.

#### **SAFETY CONCERN**

Use of a hitch with a load rating less than the load rating of the trailer can result in loss of control and may lead to death or serious injury. Use of a tow vehicle with a towing capacity less than the load rating of the trailer can result in loss of control, and may lead to death or serious injury. Be sure your hitch and tow vehicle are rated for the Gross Vehicle Weight Rating (GVWR) of your trailer.

#### **B - Trailer Information – Certification/VIN Label**

A trailer's Certification/VIN Label is typically located on the tongue or front frame of the trailer.

MANUFACTURER - Name of trailer manufacturer

DATE OF MANUFACTURE - Month and year the trailer was manufactured.

GVWR - The Gross Vehicle Weight Rating is the maximum allowable gross weight of the trailer and its contents. The gross weight of the trailer includes the weight of the trailer and all of the items within it (such as cargo, water, food and other supplies).

GAWR - The Gross Axle Weight Rating is the maximum gross weight that an axle can support. It is the lowest of axle, wheel, or tire rating. Sometimes the tire or wheel rating is lower than the axle manufacturers rating, and will then determine GAWR. The sum total of the GAWR for all trailer axles may be less than the GVWR for the trailer, because some of the trailer load is carried by the tow vehicle, rather than by the trailer axle(s). The total weight of the cargo and trailer must not exceed the GVWR, and the load on an axle must not exceed its GAWR.

TIRE SIZE - The tire size recommended for your trailer and load range.

PSIC - The "pounds per square inch- cold" is the tire pressure (Kilopascals / Pounds per Square Inch) measured when Cold.

CERTIFICATION STATEMENT - "This trailer meets all the Federal Motor Vehicle Safety Standards in effect on the date of manufacture shown above".

VIN - The Vehicle Identification Number.

VEHICLE TYPE - Generally the word "trailer" is used. However, we may put a Model #, or additional descriptor.

#### **C - Definitions**

TOW VEHICLE - When equipping a new vehicle or an older vehicle to tow your trailer, ask the vehicle dealer for advice on how to outfit the towing vehicle. Discuss the following information and equipment with the vehicle dealer.

OVERALL CARRYING AND TOWING CAPACITY OF VEHICLE - Vehicle manufacturers will provide you with the maximum towing capacities of their various models, as well as the GCWR. No amount of reinforcement will give a 100 horsepower, 2,500 pound truck the towing capacity that a 300 horsepower, 5,000 pound truck has.

TOWING HITCH - The towing hitch attached to your tow vehicle must have a capacity equal to or greater than the load rating of the trailer you intend to tow. The hitch capacity must also be matched to the tow vehicle capacity.

SUSPENSION SYSTEM - A tow vehicle equipped with a factory installed "Towing Package" likely comes equipped with heavy duty springs, heavy duty tires and other suspension components which are able to serve the size and weight of the trailer that the vehicle is rated to tow. However, the addition of additional equipment may further improve the tow vehicle performance. These may include adjustable air shocks, helper springs, etc.

BRAKE CONTROLLER - The brake controller is part of the tow vehicle and is essential in the operation of the electric brakes on the trailer. If your trailer has electric brakes it requires a brake controller be installed at the driver's position. The brake controller is not the same as the safety breakaway brake system that is installed on the trailer.

**SIDE VIEW MIRRORS** - The size of the trailer that is being towed and your state law regulations determine the size of the mirrors.

However, some states prohibit extended mirrors on a tow vehicle, except while a trailer is actually being towed. In this situation, detachable extended mirrors are necessary. Check with your dealer or the appropriate state agency for mirror requirements.

**HEAVY DUTY FLASHER** - A Heavy Duty Flasher is an electrical component that may be required when your trailer turn signal lights are attached to the tow vehicle flasher circuit.

**ELECTRICAL CONNECTOR** - An Electrical Connector connects the light and brake systems on the trailer to the light and brake controls on the towing vehicle.

**HEAVY DUTY ENGINE OIL COOLING SYSTEM** - The tow vehicle engine works harder when a trailer is being towed. Depending on the size of the trailer, you may need to install a separate engine oil cooler. Inadequate cooling may result in sudden engine failure. Ask the tow vehicle dealer if it is necessary to install a heavy duty cooling system.

**AUTOMATIC TRANSMISSION OIL COOLER** - The automatic transmission of a towing vehicle handles more power when a trailer is being towed. Inadequate cooling will shorten transmission life, and may result in sudden transmission failure. Ask the tow vehicle dealer if it is necessary to install a separate oil cooler for the automatic transmission.

**FIRE EXTINGUISHER** - It is sensible to have a fire extinguisher in the tow vehicle.

**EMERGENCY FLARES AND EMERGENCY TRIANGLE REFLECTORS** - It is wise to carry these **SAFETY CONCERN** devices even if you are not towing a trailer. It is particularly important to have these when towing a trailer because the hazard flashers of your towing vehicle will not operate for as long a period of time when the battery is running both the trailer lights and tow vehicle lights.

### **D – Coupling and Uncoupling the Trailer**

A secure coupling (or fastening) of the trailer to the tow vehicle is essential. A loss of coupling may result in death or serious injury. Therefore, you must understand and follow all of the instructions for coupling. The following parts are involved in making a secure coupling between the trailer and tow vehicle:

**COUPLING** - That part of the trailer connecting mechanism by which the connection is actually made to the trailer hitch. This does not include any structural member, extension of the trailer frame, or brake controller.

**HITCH** - That part of the connecting mechanism including the ball support platform and ball and those components that extend and are attached to the towing vehicle, including bumpers intended to serve as hitches.)

**WEIGHT DISTRIBUTING HITCH (OR EQUALIZING HITCH)** - A mechanical device that connects the trailer to the towing vehicle and by means of leverage applied on both the trailer and towing vehicle structures, when properly adjusted, distributes the imposed vertical load at the hitch and coupling connection between structures of the towing vehicle and trailer.

**WEIGHT CARRYING HITCH** - A mechanical and/or structural device that connects the trailer to the towing vehicle and that does not employ features designed to redistribute the load imposed at the hitch and carrying connection.

**SAFETY CHAINS OR CABLES** - Chains or cables permanently attached to the trailer such that if the coupler connection comes loose, the safety chains or cables can keep the trailer attached to the tow vehicle. With properly rigged safety chains or cables, it is possible to keep the tongue of the trailer from digging into the road pavement, even if the coupler-to-hitch connection comes apart. Some states do not allow safety cables, e.g.

Pennsylvania; therefore it may be wise to check with the State Police to see if your state has any restrictions on the use of safety cables, if your trailer is so equipped.

**TRAILER LIGHTING AND BRAKING CONNECTOR** - A device that connects electrical power from the tow vehicle to the trailer. Electricity is used to turn on brake lights, running lights, and turn signals as required. In addition, if your trailer has a separate braking system, the electrical connector will also supply power to the trailer brakes from the tow vehicle.

**BREAKAWAY SWITCH** - If the trailer becomes de-coupled from the towing vehicle, the breakaway switch lanyard, attached independently to the tow vehicle hitch, will pull a pin in the emergency electrical break-away switch on the trailer. The breakaway switch is activated by a separate battery supply in the trailer such as to energize the trailer brakes independently of the towing vehicle. It is important to check the state of charge of the emergency break-away battery before each trip. Simply pull the pin out of the switch by hand and then try to pull the trailer. If you feel a significant drag force the brakes are activated. Be sure to re-insert the pin in the break-away switch. Also be sure to allow enough slack in the break-away brake lanyard such that the switch will only activate (pin pulls out) if the coupler connection comes loose.

**JACK** - A device on the trailer that is used to raise and lower the trailer tongue. On larger trailers the jack is sometimes called the "landing gear."

### **SAFETY CONCERN**

\*An improperly coupled trailer can result in death or serious injury.

Do not move the trailer until:

- The coupler is secured and locked to hitch

- The safety chains are secured to the tow vehicle
- The trailer jack(s) are fully retracted

Do not tow the trailer on the road until:

- Tires and wheels are checked
- The trailer brakes are checked
- The breakaway switch is connected to the tow vehicle
- The load is secured to the trailer
- The trailer lights are connected and checked

### **E – Various Coupler Designs**

Trailers are produced with a variety of coupler devices.

- Bumper pull (Ball Hitch) Coupler is the style used on all of the Trailer Mounted Wash System trailers.

### **F – Trailer with Ball Coupler**

A ball coupler connects to a ball that is located on or under the rear bumper of tow vehicle. These systems of coupling a trailer to a tow vehicle are sometimes referred to as “bumper pull.”

A ball hitch trailer may be fitted with a tongue jack that can raise and lower the coupler. The tongue jack is mounted to the A-frame (front, or tongue) part of the trailer. By rotating the jack handle clockwise, the jack will extend and raise the tongue of the trailer. Be sure the ball hitch coupler is suitable for the size and weight of the trailer. The load rating of the coupler and the necessary ball size are listed on the trailer tongue. You must provide a hitch and ball for your tow vehicle, where the load rating of the hitch and ball are equal to or greater than that of your trailer. Also, the ball size must be the same as the coupler size. If the ball is too small, too large, is underrated, is loose or is worn, the trailer can come loose from the tow vehicle, and may cause death or serious injury.

THE TOW VEHICLE, HITCH AND BALL/PINTLE HOOK MUST HAVE A RATED TOWING CAPACITY EQUAL TO OR GREATER THAN THE TRAILER GROSS VEHICLE WEIGHT RATING (GVWR). IT IS ESSENTIAL THAT THE BALL BE OF THE SAME SIZE AS THE COUPLER.

The ball/pintle eye size and load rating (capacity) are marked on the ball/pintle eye; hitch capacity is marked on the hitch.

### **G – Before Coupling the Ball to the Tow Vehicle**

Be sure the size and rating of the hitch ball match the size and rating of the coupler. Hitch balls, pintle hooks and couplers are marked with their size and rating.

### **SAFETY CONCERN**

\*Coupler-to-hitch mismatch can result in uncoupling, leading to death or serious injury. Be sure the LOAD RATING of the hitch ball is equal or greater than the load rating of the coupler. Be sure the SIZE of the hitch ball matches the size of the coupler. Wipe the hitch ball clean and inspect it visually and by feel for flat spots, cracks and pits.

### **SAFETY CONCERN**

\*A worn, cracked or corroded hitch ball can fail while towing, and may result in death or serious injury. Before coupling trailer, inspect the hitch ball for wear, corrosion and cracks. Replace worn or damaged hitch ball.

Rock the ball to make sure it is tight to the hitch, and visually check that the hitch ball nut is solid against the lock washer and hitch frame.

Wipe the inside and outside of the coupler clean and inspect it visually for cracks and deformations; feel the inside of the coupler for worn spots and pits. If wear on the original surface profile exceeds 1/8” (.125”), the coupler should be replaced.

Be sure the coupler is tight to the tongue of the trailer. All coupler fasteners must be visibly solid against the trailer frame.

### **SAFETY CONCERN**

\*A loose hitch ball nut can result in uncoupling, leading to death or serious injury. Be sure the hitch ball is tight to the hitch before coupling the trailer.

Coupling to the Tow Vehicle

Raise the bottom surface of the coupler to be above the top of the hitch ball/pintle hook. Use the jack if one is provided; otherwise, use wood or concrete blocks to support the trailer tongue.

### **H– Coupling with a Ball Hitch**

Lubricate the hitch ball and the inside of the coupler with a thin layer of automotive bearing grease. If your trailer is equipped with a jack, raise the coupler above the ball height. Open the coupler locking mechanism. Ball couplers have a locking mechanism with an internal moving piece (ball clamp) and an outside handle, wheel, or latch.

In the open position, the coupler is able to drop fully onto the hitch ball. See the coupler instructions for details of placing the coupler in the “open” position. Slowly back up the tow vehicle so that the hitch ball is near or aligned under the coupler, if the trailer jack has raised the coupler.

### Ball Hitch Coupler Mechanism

If your trailer does not have a jack, you will have to lift the coupler and place it over the ball. If you have a jack, lower the trailer tongue until the coupler fully engages the hitch ball. If the coupler does not line up with the hitch ball, adjust the position of the tow vehicle. Engage the coupler locking mechanism. In the engaged position, the locking mechanism securely holds the coupler to the hitch ball. Insert a pin or lock through the hole in the locking mechanism. Be sure the coupler is all the way on the hitch ball and the locking mechanism is engaged. A properly engaged locking mechanism will allow the coupler to raise the rear of the tow vehicle. Using the trailer jack, test to see that you can raise the rear of the tow vehicle by 1 inch, after the coupler is locked to the hitch.

### **SAFETY CONCERN**

\*Overloading can damage the tongue jack. Do not use the tongue jack to raise the tow vehicle more than 1 inch. If the coupler cannot be secured to the hitch ball, do not tow the trailer. Call FNA GROUP at 877-362-4271 or for assistance.

Lower the trailer so that its entire tongue weight is held by the hitch, and continue retracting the jack to its fully retracted position.

### **I – Rig Safety Chains**

Visually inspect the safety chains and hooks for wear or damage. Replace worn or damaged safety chains and hooks before towing. Rig the safety chains so that they: Criss-cross underneath the coupler so if the trailer uncouples, the safety chains can hold the tongue up above the road. Loop around a frame member of the tow vehicle or to holes provided in the hitch system (but, do not attach them to an interchangeable part of the hitch assembly) Attach snap hooks up from underneath the hole (do not just drop into hole); and provide enough slack to permit tight turns, but not be close to the road surface to drag.

### **SAFETY CONCERN**

\*Improper rigging of the safety chains can result in loss of control of the trailer and tow vehicle, leading to death or serious injury, if the trailer uncouples from the tow vehicle.

- Fasten chains to safety chain receivers on the hitch, not to ball.
- Have sufficient slack to permit turning and to keep gooseneck on bed of tow vehicle, if the trailer comes loose.

### **J – Attach and Test Breakaway Brake System and Safety Components**

If the coupler or hitch fails, a properly connected and working breakaway brake system will apply electric brakes on the trailer. The safety chains will keep the tow vehicle attached and as the brakes are applied at the trailer’s axles, the trailer/tow vehicle combination will come to a controlled stop. The breakaway brake system includes a battery, a switch with a pull pin, and a lanyard. Read and follow the instructions here as well as the instructions that have been prepared by the breakaway brake manufacturer. If you do not have these instructions, call FNA GROUP at 877-362-4271 for a free copy. The breakaway brake system may be fitted with a “charging” capability that draws power from the tow vehicle. If the electrical system on your tow vehicle does not provide power to the breakaway brake battery, you must periodically charge or replace the battery to keep the breakaway brake system in working order. Connect the pull pin lanyard to the tow vehicle so that the pull pin will be pulled out before all of the slack in the safety chains is taken up (see Breakaway Brake System figure). Do not connect the pull pin cable to a safety chain or to the hitch ball or hitch ball assembly. This would keep the breakaway brake system from operating when it is needed. To test the break-away brake battery, remove the pull pin from the switch and attempt to pull the trailer forward. You should feel the trailer resisting being towed, but the wheels will not necessarily be locked. If the brakes do not function, do not tow the trailer until brakes, or battery, are repaired. Immediately replace the pull pin. The breakaway brake system battery discharges rapidly when the pull pin is removed.

### **K – Coupling to the Tow Vehicle**

### **SAFETY CONCERN**

\*An ineffective breakaway brake system can result in a runaway trailer, leading to death or serious injury if the coupler or ball hitch fails. Connect the breakaway cable to the tow vehicle; and NOT to the hitch, ball or support.

Before towing the trailer, test the function of the breakaway brake system. If the breakaway brake system is not working, do not tow the trailer. Have it serviced or repaired. Do not tow the trailer with the breakaway brake system ON because the brakes will overheat which can result in permanent brake failure.

## **SAFETY CONCERN**

\*Failure to replace the pull pin will prevent brakes from working, leading to loss of control, serious injury or death.

If you do not use your trailer for three or more months or during winter months store the battery indoors and charge the battery every three months. Replace if needed. Also, replace the breakaway brake battery according to the intervals specified by battery manufacturer.

Connect the trailer lights to the tow vehicle's electrical system using the electrical connectors. Check all lights for proper operation. Clearance and Running Lights (Turn on tow vehicle headlights).

Brake Lights (Step on tow vehicle brake pedal).

Turn Signals (Operate tow vehicle directional signal lever).

Check electric brakes for proper operation using brake controller mounted in the cab. If your trailer has electric brakes, your tow vehicle will have an electric brake controller that sends power to the trailer brakes. Before towing the trailer on the road, you must operate the brake controller while trying to pull the trailer in order to confirm that the electric brakes operate. While towing the trailer at less than 5 m.p.h., manually operate the electric brake controller in the tow vehicle cab. You should feel the operation of the trailer brakes.

## **4 – LOADING THE TRAILER**

Your custom Mobile Pressure Cleaning Trailer has been designed in such fashion that is loading is balance with and empty water tank or full water tank. Adding storage to the trailer of attaching racks, ladders and other items to the trailer will change the overall weight and cause an unsafe condition due to exceeding the total weight rating of the trailer (Gross Vehicle Weight Rating, or "GVWR").

## **SAFETY CONCERN**

\*An overloaded trailer can result in loss of control of the trailer, leading to death or serious injury.

Do not exceed the trailer Gross Vehicle Weight Rating (GVWR) or the Gross Axle Weight Rating (GAWR).

Do not load a trailer so that the weight on any tire exceeds its rating.

### **A – Tongue Weight**

It is critical to have a portion of the trailer load carried by the tow vehicle. That is, the trailer tongue must exert a downward force on the hitch. This is necessary for two reasons. First, the proper amount of tongue weight is necessary for the tow vehicle to be able to maintain control of the tow vehicle/trailer system. If, for example, the tongue exerts an upward pull on the hitch instead of pushing down on it (because the trailer is overloaded behind its axle(s)), the rear wheel of the tow vehicle can lose traction or grip and cause loss of control. Also, even if there is some weight on the tongue, but not enough weight on the tongue, the trailer can become unstable at high speeds. Remember, the faster you go the more likely the trailer is to sway. If, on the other hand, there is too much tongue weight, the tow vehicle is prone to jack-knife. Furthermore, the front wheels of the tow vehicle can be too lightly loaded and cause loss of steering control and traction, if the front wheels are driving. In addition to tow vehicle control, tongue weight is necessary to insure that the trailer axle(s) do not exceed their Gross Axle Weight Rating (GAWR)..

### **B – Loading the Trailer**

## **SAFETY CONCERN**

\*Improper tongue weight (load distribution) can result in loss of control of the trailer, leading to death or serious injury.

Do not alter the Mobile Pressure Cleaning Trailer configuration. This will affect the tongue weight and load distribution.

### **C – Checking Tongue Weight**

Refer to the following list for Mobile Pressure Cleaning Trailer configuration tongue weights or call FNA GROUP at 877-362-4271 or for assistance.

### **D – Securing the Cargo**

Since the trailer "ride" can be bumpy and rough, you must secure your hoses, wash guns and wands so that it does not shift while the trailer is being towed.

### **E – Preparing the Trailer for Loading**

It is recommended that before filling the water tank the Mobile Pressure Cleaning Trailer before coupled to the towing vehicle so not to ruin the support jack.

## **SAFETY CONCERN REMINDER**

Do not transport people inside the trailer, or on the Mobile Pressure Cleaning Trailer. The transport of people puts their lives at risk and may be illegal. Do not transport flammable, explosive, poisonous or other dangerous materials in your trailer.

## **5 – CHECKING THE TRAILER BEFORE AND DURING EACH TOW**

### **A - Pre-Tow Checklist**

Before towing, double-check all of these items: See “Inspection, Service & Maintenance Summary Charts,” for more information.

- Tires, wheels and lug nuts (see the “Major Hazards” section)
- Tire Pressure. Inflate tire on trailer and tow vehicle to the pressure stated on the VIN / Certification label.
- Coupler secured and locked (see the “Coupling and Uncoupling the Trailer” section)
- Safety chains properly rigged to tow vehicle, not to hitch or ball (see the “Coupling to the Tow Vehicle” chapter)
- Test of lights: Tail, Stop, and Turn Lights
- Test trailer brakes.
- Safety breakaway switch cable fastened to tow vehicle, not to safety chains (see the “Coupling to the Tow Vehicle” chapter)
- Cargo properly loaded, balanced and tied down (see the “Loading the Trailer” chapter)
- Tongue weight and weight distribution set-up.
- Doors and gates latched and secured
- Fire extinguisher
- Flares and reflectors

### **B – Make Regular Stops**

After each 50 miles, or one hour of towing, stop and check the following items:

- Coupler secured
- Safety chains are fastened and not dragging
- Cargo secured
- Cargo door latched and secured

## **6 – BREAKING-IN A NEW TRAILER**

### **A– Retighten Lug Nuts at First 10, 25 and 50 Miles**

Wheel lugs can shift and settle quickly after being first assembled, and must be checked after the first 10, 25 and 50 miles of driving. Failure to perform this check may result in a wheel coming loose from the trailer, causing a crash leading to death or serious injury.

## **SAFETY CONCERN**

Lug nuts are prone to loosen after initial installation, which can lead to death or serious injury. Check lug nuts for tightness on a new trailer or when wheel(s) have been remounted after the first 10, 25 and 50 miles of driving. See Section 7.2.12.2 “Lug Nuts (Bolts)” on page 28 for proper torquing techniques.

### **B – Adjust Brake Shoes at First 200 Miles**

Brake shoes and drums experience a rapid initial wear. The brakes must be adjusted after the first 200 miles of use, and each 3,000 miles thereafter. Some axles are fitted with a mechanism that will automatically adjust the brake shoes when the trailer is “hard braked” from a rearward direction. Read your axle and brake manual to see if your brakes adjust automatically. If you do not have the axle and brake manual, call FNA GROUP at (800) 952- 4228 or for a free copy.

A hard stop is used to:

- Confirm that the brakes work.
- Confirm that the trailer brakes are properly synchronized with the tow vehicle brakes using the brake controller in the tow vehicle.
- Adjust the brake shoes as necessary.
- For surge brakes check the Master cylinder reservoir for fluid.

If your trailer is not fitted with automatically adjusting brakes, the brakes will need to be manually adjusted.

See section 7.2.5.2, “Manually Adjusting Brake Shoes,” for instructions.

## **C – Synchronizing the Brake System**

Trailer brakes are designed to work in synchronization with the brakes on the tow vehicle. When the tow vehicle and trailer braking systems are synchronized, both braking systems contribute to slowing, and the tongue of the trailer will neither dive nor rise sharply.

### **SAFETY CONCERN**

\*If trailer and tow vehicle brakes do not work properly together, death or serious injury can occur. Road test the brakes in a safe area at no more than 30mph before each tow. To insure safe brake performance and synchronization, read and follow the axle/brake and the brake controller manufacturers' instructions. If you do not have these instructions, call FNA GROUP at 877-362-4271 for a free copy.

### **TIRE PRESSURE**

Check tire pressures on both the trailer and tow vehicle. Inflate to the maximum shown on the VIN / Certification Label.

## **7 – INSPECTION, SERVICE AND MAINTENANCE**

### **A – Inspection, Service and Maintenance Summary Charts**

You must inspect, maintain and service your trailer regularly to insure safe and reliable operation. If you cannot or are unsure how to perform the items listed here, have your dealer do them.

Note: In addition to this manual, also check the relevant component manufacturer's manual.

### **B – Inspection and Service before Each Use**

Item Inspection / Service Manual Section Reference

Breakaway Brakes- Electric & Hydraulic

- Check operation
- Check fluid level

Breakaway Battery

- Fully charged
- connections clean

Shoes and Drums

- Adjust

Coupler and Hitch Ball, Pintle Eye and Pintle Hook

- Check for cracks, pits, and flats.
- Replace w/ball & coupler having trailer GVW Rating.
- Grease.
- Check locking device & replace.
- Check Safety Pin.

Safety Chain(s) & Hooks

Check for wear and damage

Tires Check

- tire pressure when cold. Inflate as needed.
- Wheels - Lug Nuts (Bolts) & Hub
- Check for tightness Tighten. For new and remounted wheels, check torque after first 10, 25 & 50 miles of driving and after any impact

### **C – Inspection and Service each 6 Months or 6,000 Miles**

Item Inspection / Service Manual Section Reference

Tires Rotate @ 5,000 miles

- Brakes, electric
- Magnets
- Controller (in tow vehicle)
- Check wear and current draw
- Check power output
- (amperage) and modulation
- See Controller Mfr's Manual

Tires

- Inspect tread and sidewalls thoroughly.
- Replace tire when treads are worn, when sidewall has a bulge, or sidewall is worn

## **D – Inspection and Service Each Year or 12,000 Miles**

Item Inspection / Service Manual Section Reference

Brakes, all types

- Shoes and drums, Check for scoring and wear.
- Replace per manufacturer's specifications See Brake Mfr's Manual

Jack, Drop-leg

- Grease gears
- See Jack Mfr's Manual

Structure Check

- Frame members & Welds
- Inspect all frame members, bolts & rivets.
- Repair or replace damaged, worn or broken parts.
- Inspect all welds. Repair as needed

Wheels Check

- Sealed Bearings (Hubs)
- UNSEALED Bearings (Hubs)

Rims

- Check and confirm free running. Replace if not (sealed bearings are not serviceable)
- Disassemble / inspect / assemble and repack.
- Replace promptly if immersed in water
- Inspect for cracks & dents.
- Replace as needed.
- See Axle Mfr's Manual

Structure

- Axle Attachment Bolts
- Check

### **SAFETY CONCERN**

\*Worn or broken suspension parts can cause loss of control and injury may result. Have trailer professionally inspected annually and after any impact. To perform many of the inspection and maintenance activities, you must jack up the trailer. The jack should be placed under the axle as close to the wheel as possible. When jacking and using jack stands, place them so as to clear wiring, brake lines, and suspension parts (springs, torsion bars, etc.). Place jacks and jack stands inside of the perimeter strip on the supporting structure to which the axles are attached. When jacking some tandem axle trailers, note the position of the equalizer shackles before and after jacking. The shackles can "flip" down when both axles on one side are raised, which will result in instability during towing and may cause damage to the suspension.

### **SAFETY CONCERN**

\*Never crawl under your trailer unless it is on firm and level ground and resting on properly placed and secured jack stands.

Trailer Structure

Because the trailer floor receives the most abuse, it will most likely corrode before any other part of the structure. This is particularly true for horse and livestock trailers, having floors subjected to urine and manure. The urine and manure are corrosive to the metal flooring and other structural parts of the trailer. Remove the rubber mats from the floor of the trailer, and wash them, at least every three months. Using a power washer and a detergent solution, wash both sides of the rubber mat, as well as the floor and walls of the trailer. Rinse the rubber mat and the trailer floor and walls. Be sure the rubber mat and trailer floor are completely dry before replacing the rubber mat.

Fasteners and Frame Members

Inspect all of the fasteners and structural frame members for bending and other damage, cracks, or failure. Repair or replace any damaged fastener and repair the frame member. If you have any questions about the condition or method of repair of fasteners or frame members, get the recommendation of, or have the repair done by, your dealer.

### **SAFETY CONCERN**

\*Broken or damaged fasteners or welds can cause injury or damage to trailer and contents. Inspect for, and repair all damaged parts at least once a year.

Welds

All welds can crack or fail when subjected to heavy loads or movement of cargo that was not properly tied to prevent movement. Any time that you know or suspect that the trailer has been subjected to heavy loads or movement of cargo, immediately inspect the welds and fasteners for damage. To prevent severe damage to your trailer, inspect all of the welds for cracks or failure at least once a year.

## **SAFETY CONCERN**

\*Improper weld repair will lead to early failure of the trailer structure and can cause serious injury or death. Do not repair cracked or broken welds unless you have the skills and equipment to make a proper repair. If not, have the welds repaired by your dealer.

Equalizer  
Shackles

## **E –TRAILER BRAKES**

### **Brake Shoes and Drums**

Properly functioning brake shoes and drums are essential to ensure safety. You must have your dealer inspect these components at least once per year, or each 12,000 miles. During the initial use of the trailer, braking performance may be slightly below normal until the brakes have fully seated with the drums. The brake shoes must be adjusted after the first 200 miles of use, and each 3,000 miles thereafter. Some axles are fitted with a brake mechanism that will automatically adjust the brake shoes when the trailer is “hard braked” from a rearward direction. Read your axle and brake manual to see how to adjust your brakes. If you do not have this manual, call FNA GROUP at 877-362-4271 or for a free copy.

### **Manually Adjusting Brake Shoes**

Some braking systems are not automatically adjusted by hard stopping. These brakes require manual adjustment. The following steps apply to adjust most manually adjustable brakes. Read your axle and brake manual to see how to adjust your brakes. If you do not have this manual, call FNA GROUP at 877-362-4271 or (717) 336-7528 for a free copy. Jack up the trailer and secure it on adequate capacity jack stands. Be sure the wheel and brake drum rotate freely. Remove the adjusting-hole cover from the adjusting slot on the bottom of the brake backing plate.

With a screwdriver or standard adjusting tool, rotate the star wheel of the adjuster assembly to expand the brake shoes.

Adjust the brake shoes out until the pressure of the linings against the drum makes the wheel very difficult to turn.

Note: Your trailer maybe equipped with drop spindle axles. See axle manual for your axle type. You will need a modified adjusting tool for adjusting the brakes in these axles. With drop spindle axles, a modified adjusting tool with about an 80 degree angle should be used. Rotate the star wheel in the opposite direction until the wheel turns freely with a slight drag. Replace the adjusting-hole cover. Repeat the above procedure on all brakes. Lower the trailer to the ground.

### **Brakes-Electric**

Two different types of electric brakes may be present on the trailer: an emergency electric breakaway system, which acts only if the trailer comes loose from the hitch and the breakaway pin is pulled. The other brake is an electric braking system that acts whenever the brakes of the tow vehicle are applied.

### **Breakaway System Battery**

This battery supplies the power to operate the trailer brakes if the trailer uncouples from the tow vehicle. Please be sure to check, maintain and replace the battery according to the battery manufacturer’ instructions.

## **SAFETY CONCERN**

\*Extreme cold weather can degrade battery performance and cause brakes to not operate properly. Always check battery charge level before towing.

### **Breakaway System Switch**

This switch causes the breakaway battery to operate the electric brakes if the trailer uncouples from the tow vehicle. The pull cable for the pull pin is connected to the tow vehicle, and the switch is connected to the trailer. To check for proper functioning of the switch, battery and brakes, you must pull the pin from the switch and confirm that the brakes apply to each wheel. You can do this by trying to pull the trailer with the tow vehicle, after pulling the pin. The trailer brakes may not lock, but you will notice that a greater force is needed to pull the trailer. Be sure that your breakaway brake battery is fully charged after testing.

## **SAFETY CONCERN**

\*If electric breakaway brakes do not operate when trailer is uncoupled from the tow vehicle, death or serious injury can occur. Check emergency breakaway brake system BEFORE each tow.

### **Tow Vehicle Operated Electric Brakes**

The electric brakes that operate in conjunction with the tow vehicle brakes must be “synchronized” so that braking is properly distributed to the tow vehicle brakes and the trailer brakes. For proper operation and synchronization, read

and follow the axle/brake and the brake controller manufacturers' instructions. If you do not have these instructions, call FNA GROUP at (800) 952-4228 or for a free copy.

### **Magnets for All Electric Brakes**

To make certain an electrically-operated braking system will function properly, you must have your dealer inspect the magnets at least once a year, or each 12,000 miles. See the brake manual for wear and current inspection instructions.

### **Brakes-Hydraulic**

If your trailer has hydraulically-operated brakes, they function the same way the hydraulic brakes do on your tow vehicle.

The hydraulic braking system must be inspected by a dealer, at least as often as the brakes on the tow vehicle, but no less than once per year. This inspection includes an assessment of the condition and proper operation of the wheel cylinders, brake shoes, brake drums and hubs. You must check the fluid level in the master cylinder reservoir at least every three months. If you tow your trailer an average of 1,000 miles per month in a hot and dry environment, you must check the brake fluid level once a month. The brake fluid reservoir is located on the tongue of the trailer or near the gooseneck. Fill with DOT 4 brake fluid.

### **Hydraulic Surge**

In a hydraulic surge brake system, the trailer's service brakes are applied by the inertial differential pressure developed between the tow vehicle and the trailer, during the braking process. This, in turn, creates a mechanical pressure which is applied to the push rod of the master cylinder in the hydraulic surge brake coupler which activates the brakes.

## **F – TRAILER CONNECTION TO TOW VEHICLE**

### **Coupler and Ball**

The coupler on the trailer connects to the ball attached to the hitch on the tow vehicle. The coupler, ball and hitch transfer the towing forces between the tow vehicle and the trailer. Before each tow, coat the ball with a thin layer of automotive bearing grease to reduce wear and ensure proper operation; and check the locking device that secures the coupler to the ball for proper operation. See the coupler manufacturer's manual for other inspection and maintenance activities. If you do not have this manual, call FNA GROUP at 877-362-4271 or (717) 336-7528 for a free copy. If you see or feel evidence of wear, such as flat spots, deformations, pitting or corrosion, on the ball or coupler, immediately have your dealer inspect them to determine the proper action to prevent possible failure of the ball and coupler system. All bent or broken coupler parts must be replaced before towing the trailer. The coupler handle lever must be able to rotate freely and be pinned/snap into the latched position. Oil the pivot points, sliding surfaces, and spring ends with SAE 30W motor oil. Keep the ball pocket and latch mechanism clean. Dirt or contamination can prevent proper operation of the latching mechanism. When replacing a ball, the load rating must match or exceed the GVWR of the trailer.

### **Pintle Eye**

The pintle eye on the trailer connects to the hook attached to the hitch on the tow vehicle. The eye, hook and hitch transfer the towing forces between the tow vehicle and the trailer. Before each tow check the locking device that secures the eye to the hook for proper operation. See the coupler manufacturer's manual for other inspection and maintenance activities. If you do not have this manual, call FNA GROUP at 877-362-4271 or (717) 336-7528 for a free copy. If you see or feel evidence of wear, such as flat spots, deformations, pitting or corrosion, on the eye, immediately have your dealer inspect them to determine the proper action to prevent possible failure of the eye/pintle hook system. All bent or broken parts must be replaced before towing the trailer. The hook locking lever must be able to rotate freely and be pinned/snap into the latched position. Oil the pivot points and sliding surfaces with SAE 30W motor oil. Keep the latch mechanism clean. Dirt or contamination can prevent proper operation of the latching mechanism. When replacing an eye or pintle hook, the load rating must match or exceed the GVWR of the trailer.

### **Breakaway Hinge Trailer Tongue**

The breakaway hinge trailer tongue allows the tongue to be folded back against the trailer. This in effect shortens the trailer length for ease of storage of the trailer. Before use, always make sure the lighting harness and brake lines (if equipped) are not pinched by the hinge. Make sure the wiring is loose enough for tight turns without the harness dragging. Always use safety chains that are of the appropriate length and connected correctly. Make sure the hinge cotter pin is in position and the hinge is secured before towing.

### **Landing Leg or Jack**

If a grease fitting is present, you must use a grease gun to lubricate the jack mechanism. Grease the gears in the top of hand-cranked jacks once a year, by removing the top of the jack and pumping or hand packing grease into the gears.

### **Lights and Signals**

Before each tow, check the trailer taillights, stoplights, turn signals and any clearance lights for proper operation.

### **SAFETY CONCERN**

\*Improper operating taillights, stoplights and turn signals can cause collisions. Check all lights before each tow.

## **Tires**

Trailer tires may be worn out even though they still have plenty of tread left. This is because trailer tires have to carry a lot of weight all the time, even when not in use. It is actually better for the tire to be rolling down the road than to be idle. During use, the tire releases lubricants that are beneficial to tire life. Using the trailer tires often also helps prevent flat spots from developing. The main cause of tire failure is improper inflation. Check the cold tire inflation pressures at least once a week for proper inflation levels. "Cold" means that the tires are at the same temperature as the surrounding air, such as when the vehicle has been parked overnight. Wheel and tire manufacturers recommend adjusting the air pressure to the trailer manufacturer's recommended cold inflation pressure, in pounds per square inch (PSI). This pressure will be stated on the vehicle's Federal Certification Label or on the Tire Placard for when the trailer is loaded to its gross vehicle weight rating (GVWR). If the tires are inflated to less than the recommended inflation level or the GVWR of the trailer is exceeded, the load carrying capacity of the tire could be dramatically affected. If the tires are inflated more than the recommended inflation level, handling characteristics of the tow vehicle/trailer combination could be affected. Refer to the owner's manual or talk to your dealer or vehicle manufacturer if you have any questions regarding proper inflation practices. A drop in tire pressure could cause the tire to become overloaded, leading to excessive heat build up. If a trailer tire is under-inflated, even for a short period of time, the tire could suffer internal damage. High speed towing in hot conditions degrades trailer tires significantly. As heat builds up during driving, the tire's internal structure starts to breakdown, compromising the strength of the tire. It is recommended to drive at moderate speeds. Statistics indicate the average life of a trailer tire is about five years under normal use and maintenance conditions. After three years, replacing the trailer tires with new ones should be considered, even if the tires have adequate tread depth. It is best to have your tires inspected by a tire supplier to determine if your tires need to be replaced. If you are storing your trailer for an extended period, make sure the tires are fully inflated to the maximum rated pressure and that you store them in a cool, dry place, such as a garage. Use tire covers to protect the trailer tires from the harsh effects of the sun.

## **SAFETY CONCERN**

\*Worn, damaged or under-inflated tires can cause loss of control, resulting in damage, serious injury and possibly death. Inspect tires before each tow.

## **Wheel Rims**

If the trailer has been struck, or impacted, on or near the wheels, or if the trailer has struck a curb, inspect the rims for damage (i.e. being out of round); and replace any damaged wheel. Inspect the wheels for damage every year, even if no obvious impact has occurred.

## **Wheels, Bearings & Lug Nuts**

A loose, worn or damaged wheel bearing is the most common cause of brakes that grab. To check your bearings, jack trailer and check wheels for side-to-side looseness. If the wheels are loose, or spin with a wobble, the bearings must be serviced or replaced. Most trailer axles are built with sealed bearings that are not serviceable. Sealed bearings must be replaced as complete units.

## **Bearings (Hubs)**

The bearings and hubs must be inspected and lubricated once a year or 12,000 miles to insure safe operation of your trailer. If a trailer wheel bearing is immersed in water, it must be replaced. If your trailer has not been used for an extended amount of time, have the bearings inspected and packed/lubricated more frequently, at least every six months and prior to use. For complete details on hub removal, seal replacement and bearing lubrication, consult the axle manufacturer's service manual. If you do not have this manual, call FNA GROUP at 877-362-4271 or for a free copy.

## **Lug Nuts (Bolts)**

Being sure wheel mounting nuts (lug nuts) on trailer wheels are tight and properly torqued is an important responsibility that trailer owners and users need to be familiar with and practice. Inadequate and/or inappropriate wheel nut torque (tightness) is a major reason that lug nuts loosen in service. Loose lug nuts can rapidly lead to a wheel separation with potentially serious safety consequences. Lug nuts are prone to loosen right after a wheel is mounted to a hub. When driving on a new or remounted wheel, check the lug nut tightness often during the first few hundred miles of the trailer's use, especially after the first 10, 25 and 50 miles of driving, before each tow, and at least twice per year thereafter.

## **SAFETY CONCERN**

Lug nuts are prone to loosen after initial installation, which can lead to death or serious injury. Check lug nuts for tightness on a new trailer or when wheel(s) have been remounted after the first 10, 25 and 50 miles of driving.

## **SAFETY CONCERN**

Metal creep between the wheel rim and lug nuts will cause rim to loosen and could result in a wheel coming off, leading to death or serious injury. Tighten lug nuts before each tow. Tighten the lug nuts to the proper torque for the axle size on your trailer to prevent wheels from coming loose. Use a torque wrench to tighten the fasteners. The only way to be

certain you have checked the torque or torqued the lug nuts to the proper torque is with a torque wrench. Four-way wrenches, ratchets, and similar tools can be useful for short-term emergency repairs, but are not appropriate tools for adequately checking lug nut torque. You must use a torque wrench to adequately indicate the torque that you are applying to the lug nut. If you do not have a torque wrench, tighten the fasteners with a lug wrench as much as you can, then have a service garage or dealer tighten the lug nuts to the proper torque. Overtightening will result in breaking the studs or permanently deforming the mounting stud holes in the wheels. Keep a record of the date and approximate mileage when you check the lug nut torque. Note any lug nut that has lost torque. Investigate the reason(s) if the lug nut torque is not maintained after more than one retorquing application, because this indicates there is something wrong with the lug nuts, nut studs, wheels and/or hubs and should be corrected. Contact your dealer or vehicle manufacturer immediately if you experience any persistent lug nut loosening or any other lug, wheel or axle problems. In the event of a wheel separation incident, notify the vehicle manufacturer and dealer. Seek prompt professional assistance in assessing the trailer and its gear, and retain, but don't re-use involved lugs, wheels and studs. Don't repair or service the trailer yourself. Call a trained technician.

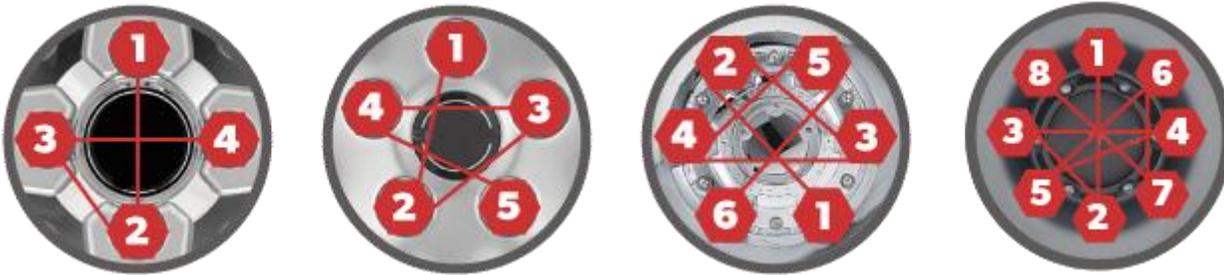


Figure 7-1 Lug Nut Sequence of Tightening

To assure a properly installed wheel, the wheel fastener must be tightened in two stages. Each tightening stage must be done in the proper sequence. Use the sequence shown in the figure below for each bolt pattern.

**Lug Nut Torque Specifications**

Stud Size	Lug Nut Type	Torque Specifications	Wheel Size & Type	Wheel Material
7/16"	Coned	55-65 ft.-lb.	8"-14"	Steel/Aluminum
1/2"	Coned	75-85 ft.-lb.	8"-14"	Steel/Aluminum
9/16"	Coned	95-115 ft.-lb.	8"-14"	Steel/Aluminum
12mm	Coned	70-80 ft.-lb.	8"-14"	Steel/Aluminum
14mm	Coned	85-95 ft.-lb.	8"-14"	Steel/Aluminum
1/2"	Coned	90-120 ft.-lb.	15"	Steel
1/2"	Coned	90-120 ft.-lb.	16"	Steel
9/16"	Coned	120-140 ft.-lb.	16"	Steel
5/8"	Coned w/ Wheel Clamp Ring	190-210 ft.-lb.	17.5" Single or 16" Dual	Steel
5/8"	Flanged Nuts (Non-Rotating Flange)	275-325 ft.-lb.	17.5" Single or 16" Dual	Steel
5/8"	Flanged Nuts (Rotating Flange)	190-210 ft.-lb.	17.5" Single or 16" Dual	Steel
1/2"	Coned	90-100 ft.-lb.	15"	Aluminum
1/2"	Coned	90-100 ft.-lb.	16"	Aluminum
9/16"	Coned	120-140 ft.-lb.	16"	Aluminum
9/16"	Coned	130-150 ft.-lb.	17.5"	Aluminum
5/8"	Coned	140-160 ft.-lb.	17.5"	Aluminum
5/8"	Flanged Nuts (Rotating Flange)	150 ft.-lb.	16"	Aluminum

**Important notes:**

- The mating surfaces of the wheel and hub should be free of damage and excessive paint. Smooth clean surfaces provide the best clamping pressure and torque retention.
- Start all bolts or nuts by hand to prevent cross threading.
- Light grease lubrication is only required on 5/8" studs used with a clamp ring. All other fasteners are to be clean and dry for assembly.
- Use a calibrated torque wrench set to the correct torque.
- Complete the Torque sequence in two complete stages through the criss-cross pattern shown in Figure 7-1.
- For wheel sizes, fasteners, and wheel materials not listed in the above chart, please contact FNA GROUP Incorporated at (800) 952-4228.

**BEFORE DRIVING, MAKE SURE YOUR VEHICLE MAINTENANCE AND TRAILER MAINTENANCE ARE CURRENT. THIS IS VERY IMPORTANT BECAUSE TOWING PUTS ADDITIONAL STRESS ON THE TOW VEHICLE.**

- Check and correct tire pressure on the tow vehicle and trailer, including the spare tire.
- Make sure the wheel lug nuts/bolts on the tow vehicle and trailer are tightened to the correct torque.
- Be sure the hitch, coupler, draw bar and other equipment that connect the trailer and the tow vehicle are properly secured and adjusted.
- Make sure the safety chains are properly criss-crossed and connected, not touching the road but with enough slack to make turns.
- Check that the wiring is properly connected; not touching the road, but loose enough to make turns without disconnecting or damaging the wires.
- Make sure all running lights, brake lights, turn signals and hazard lights are working.
- Verify that the brakes on the tow vehicle and trailer are operating correctly.
- Ensure the breakaway system lanyard is connected to the tow vehicle but not to the safety chains or ball mount.
- Check that all items are securely fastened on and in the trailer.
- Be sure the trailer jack, tongue support and any attached stabilizers are raised and locked in place.
- Check load distribution to make sure the tow vehicle and trailer are properly balanced front to back and side to side.
- Check side- and rear-view mirrors to make sure you have good visibility.
- Check routes and restrictions on bridges and tunnels.
- Make sure you have wheel chocks and jack stands.