

USING THE CRX® E-POWER POWERSHOT™

- To check the charge of the POWERSHOT, press the power button for one second. Lights will display on the left of the power button. Four lights indicates that the unit is fully charged.
- To charge the POWERSHOT, use the USB cable provided. Plug the USB end of the cable into a power source and the other end of the cable into the POWERSHOT, near the power button (lift the rubber flap).

USB CHARGING

- Using the cable provided, connect the device (ie. phone, tablet, etc.) into the output on the end of the POWERSHOT, near the power button (lift the rubber flap).
- Press the power button for one second to turn on the power and begin charging the device.
- When your device is completely charged, turn the POWERSHOT off by pressing the power button.

WIRELESS PHONE CHARGING

- Press the power button on the POWERSHOT twice. A red light indicator on the far-left side of the power button will turn on.
- Place the smart phone directly on the top of the POWERSHOT; a green light will come on and it will start charging. *Note: Your phone case may prevent wireless charging.*
- To turn off wireless charging, press the power button twice.

FLASHLIGHT SETTINGS

- To turn the on the flashlight, press and hold the flashlight icon (next to the power button) for one second. This will turn on the flashlight to Solid Mode.
- To turn on the flashlight to SOS Mode, press and hold the flashlight icon for three seconds.
- To turn on the Lamp, press the flashlight icon twice.

